# UNHCR Emergency Trench Latrine Wood+Plastic

**Tools and Guidance for Refugee Settings** 






# UNHCR Standardized WASH Designs Emergency Communal Trench Latrine (Wood + Plastic)

#### **FOREWORD**


These emergency communal trench latrine designs form part of UNHCR's series of Standardized WASH Design Guidelines for Refugee Settings which are the result of an extensive review process with WASH actors active in refugee settings. It is recognized that the Standardized WASH Designs will require continuous review and amendment in response to changes in engineering best-practice and feedback from the field. Therefore further review will be managed by a Technical Review Committee which will meet regularly to discuss issues related to the use of the design and an annual review will be reported back to the WASH community. More urgent amendments will be reported as, and when, required. Note that this latrine is based on a design shared by OXFAM GB.

FOREWORD	1
ENGINEERING DRAWINGS	2
STEP-BY-STEP ASSEMBLY DRAWINGS	7
BILL OF QUANTITIES	19
VISUAL BILL OF QUANTITIES	20
SPECIFICATIONS FOR TOILET CONSTRUCTION IN REFUGEE SETTINGS	21
400SCOPE	21
401 SITE SELECTION	21
402PREVENTION OF SURFACE OR GROUND WATER CONTAMINATION	21
403 GUIDELINES FOR PIT REINFORCEMENT	21
404GUIDELINES FOR TOILET SLAB STRENGTH	22
405GUIDELINES FOR TOILET SLAB ANCHORAGE	22
406GUIDELINES FOR SANITARY SEALING	22
407GUIDELINES FOR THE USE OF PLASTIC SHEETING	22
408GUIDELINES FOR TOILET DOORS	23
409GUIDELINES FOR COMMUNAL TOILET PRIVACY WALLS	
410GUIDELINES FOR LIGHTING	
411 GUIDELINES FOR VECTOR CONTROL MEASURES	24
412GUIDELINES FOR RAIN AND STORMWATER PROTECTION	24
413GUIDELINES FOR ADDITIONAL WASH BLOCK ACCESSORIES	24
414COLLECTION OF ANAL CLEANSING AND SANITARY MATERIALS	24
415MATERIAL SPECIFICATIONS OF COMMON CONSTRUCTION MATERIALS	25
416HANDWASHING STATIONS DESIGN CONSIDERATIONS	26
417ENVIRONMENTAL CONSIDERATIONS FOR SOURCING WOOD	26
418DECOMMISSIONING	26
419UNHCR STANDARD TOILET DESIGNS FOR REFUGEE SETTINGS	26
USEFUL REFERENCES	28

### **Front Panel**

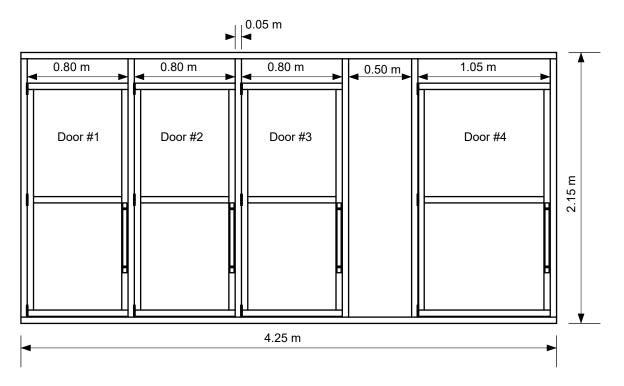

### **Rear Panel**

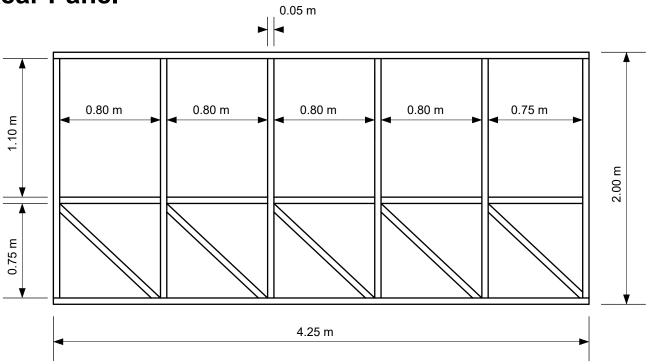

#### NOTES


- 1. All toilet structures to be located at least 30m from water sources and households.
- 2. Distances to be increased when excavating pits in fissured rock.
- 3. Site to be adequately cleared and levelled before starting construction.

# D-401

1:30




### **Roof Panel**

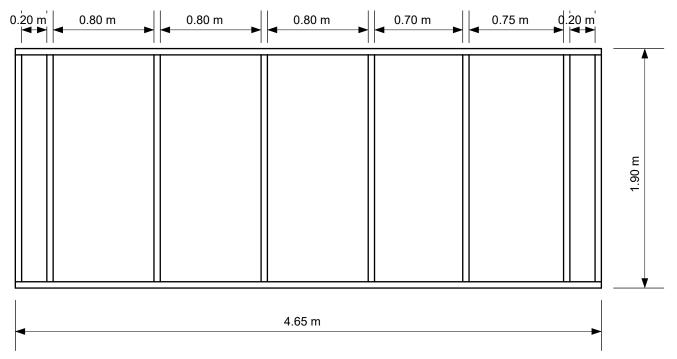

During a 1st phase emergency response the roof panel may be left off the design provided that it is added within 3 months.

### **Side Panels**

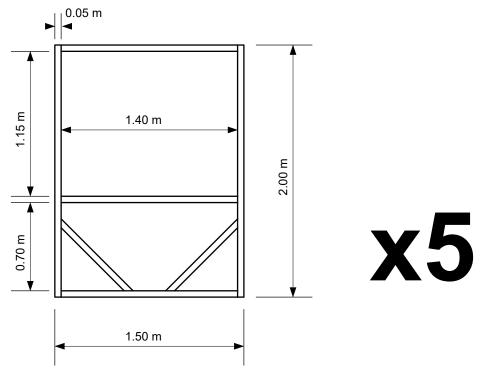


#### NOTES

- 1. Individual panels to be prepared in a dedicated mass production facility and transported to the assembly location.
- 2. Panels timbers to be joined either using galvanized screws or at least two (2) galvanized skewed nails at each connection location.
- 3. Panel-to-panel connections to be made using M10 bolts for ease of dissassembly or movement to new locations.


1:30



### **Doors Detail**

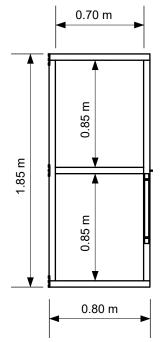

**x3** 

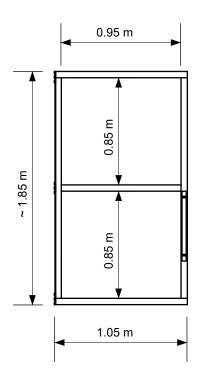


X1

#### NOTES

- 1. All doors hung straight and level.
- 2. All doors equipped with three (3) hinges at least 50cm long. All screw holes filled with screws. Nails not permitted.
- 3. Maximum gap between door and frame 3mm. Maximum gap between door and floor 10mm.
- 4. All doors to be equipped with a long child friendly handle of at least 50cm length on both the inside and outside door faces.
- 5. All doors to be equipped with a child friendly and secure locking mechanism.

### **Latrine Slab Support Planks**

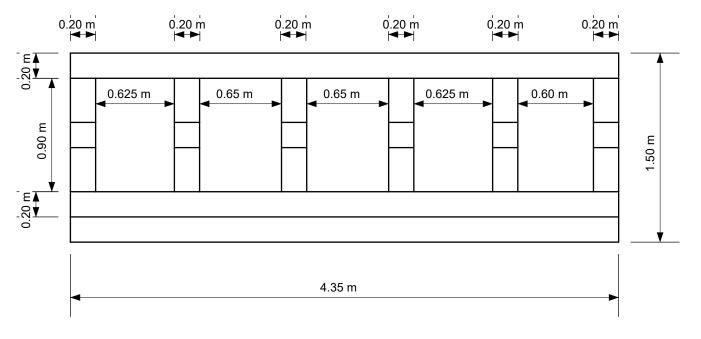

#### NOTES

- 1. Wooden supporting planks at least 2cm thick, free from from defects, and tested to be able to support the weight of 6 persons.
- 2. All wood structures in contact with ground to be treated with used engine oil.
- 3. Final slab surface to be at least 20cm 30cm above ground level to prevent water ingress.
- 4. Outer surroundings of platform to be sealed from water ingress using tamped clay or 30cm of concrete sanitary seal.

1:30

D-40,

Emergency Trench Latrine
General Layout
PROJECT
Project Name, Country


DRAWN BY
B. Harvey - 11/10/15
APPROVED BY
M. Burt - 15/11/15
SCALE

units
metres
sheet
3 of 5
DATE PUBI


3 01 5 **DATE PUBLISHED** 15/11/15



### **Front Section**

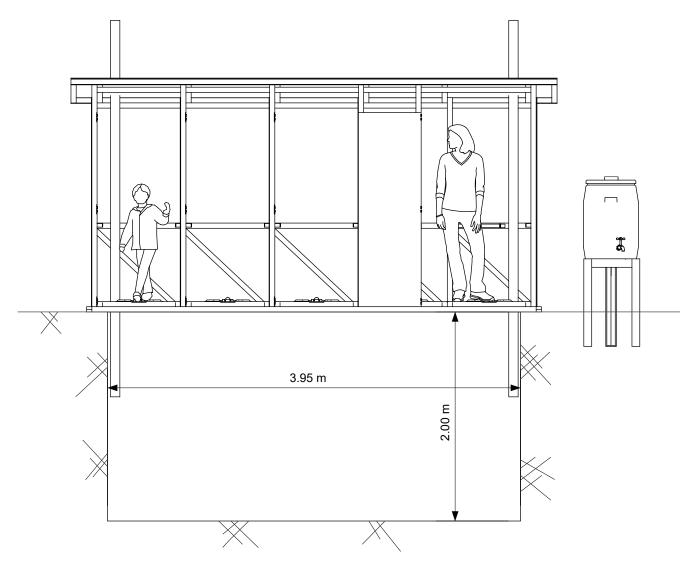

### **Plan View**

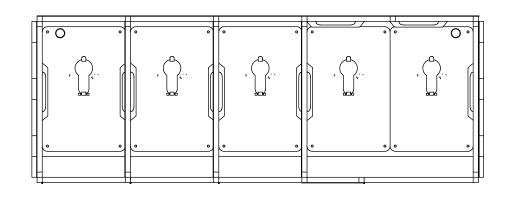



#### NOTES

- 1. Plastic interagency latrine slabs to be firmly fixed into place with either screws, nails, or wire.
- 2. All plastic sheeting to meet UN humanitarian standards (i.e. 200g/m2 700N tensile strength, UV stabilized laminated woven or braided mesh of black high density polyethylene between two white layers of low density polyethylene).
- 3. All latrines to be equipped with a functional handwashing station with soap, running water and adequate drainge.

1:30

D-401

Emergency Trench Latrine
General Layout
PROJECT
Project Name, Country


**DRAWN BY**B. Harvey - 11/10/15 **APPROVED BY**M. Burt - 15/11/15

M. Burt - 15/11/15
SCALE

units
metres
sheet
4 of 5
DATE PUBLISHED

15/11/15

UNHCR
The UN Refugee Agency

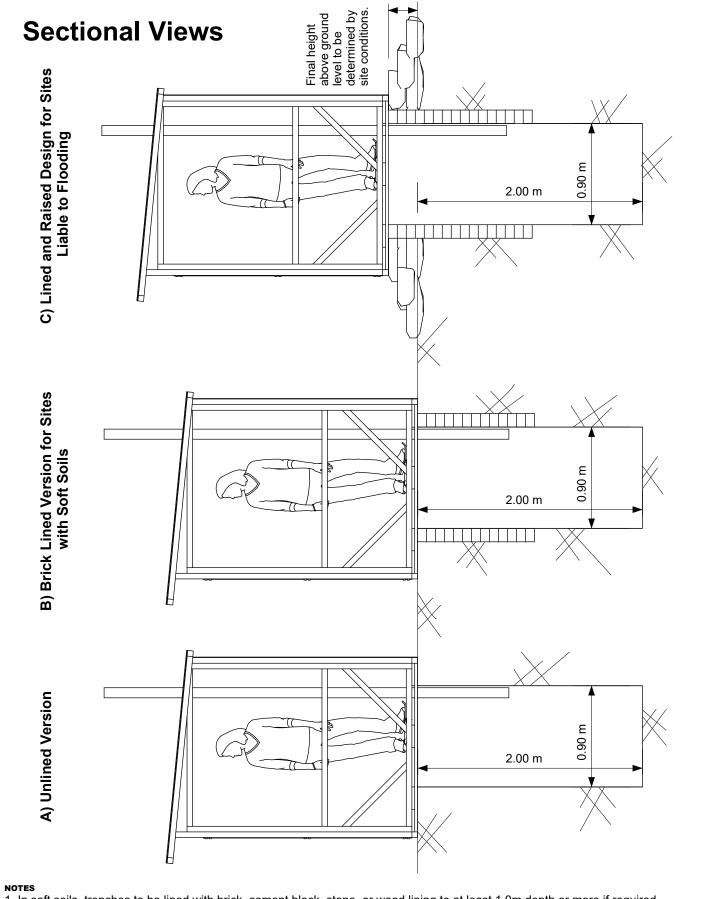

- 1. In soft soils, trenches to be lined with brick, cement block, stone, or wood lining to at least 1.0m depth or more if required.
- 2. The base of all pits must be at least 1.5m higher than average groundwater table.
- 3. Maximum depth of all pits to be no more than 2.0m (health and safety requirement).

D-40,

Emergency Trench Latrine
General Layout
PROJECT
Project Name, Country


DRAWN BY
B. Harvey - 11/10/15
APPROVED BY
M. Burt - 15/11/15
SCALE


1:30


units
metres
sheet
5 of 5


DATE PUBLISHED
15/11/15




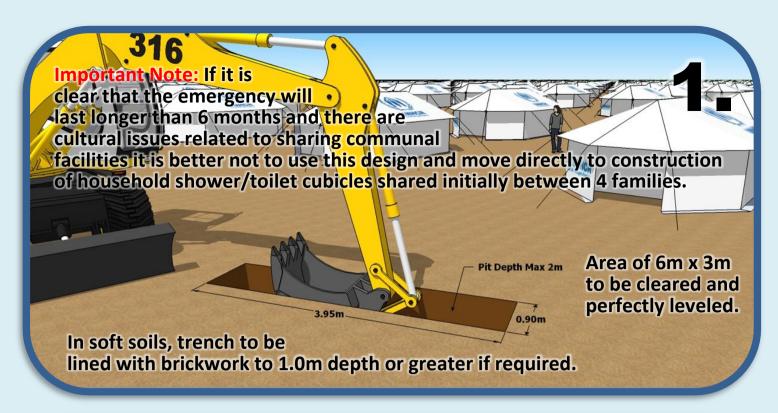


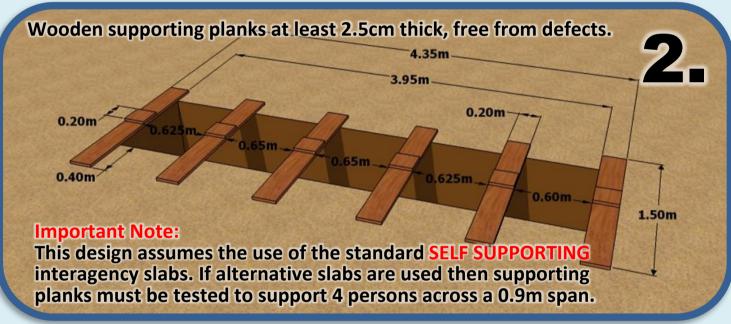


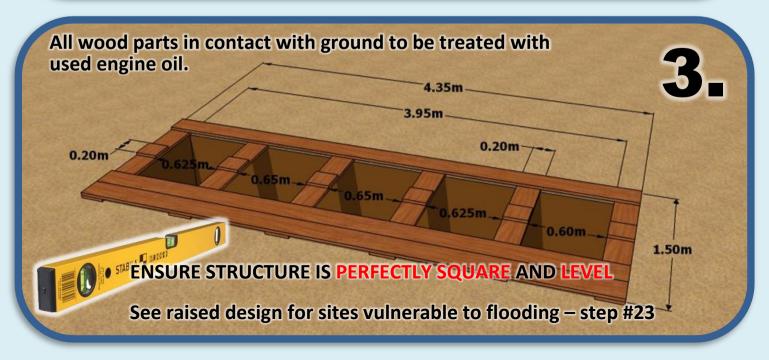


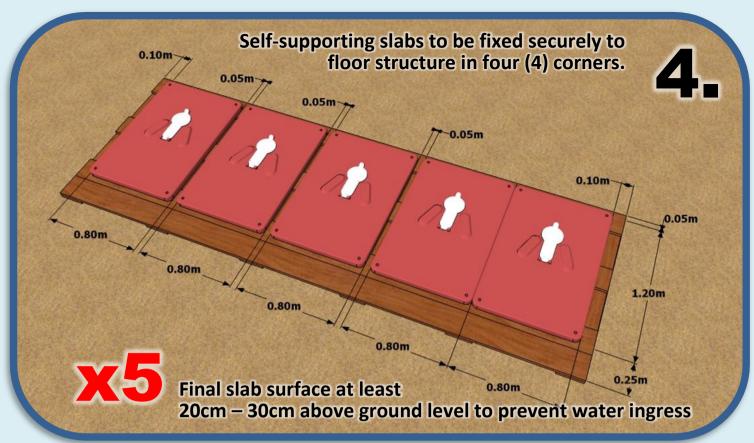

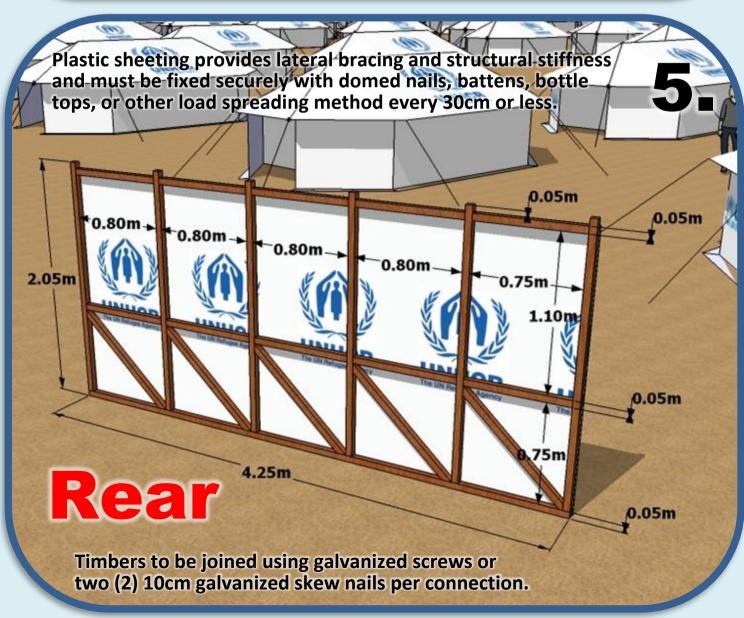


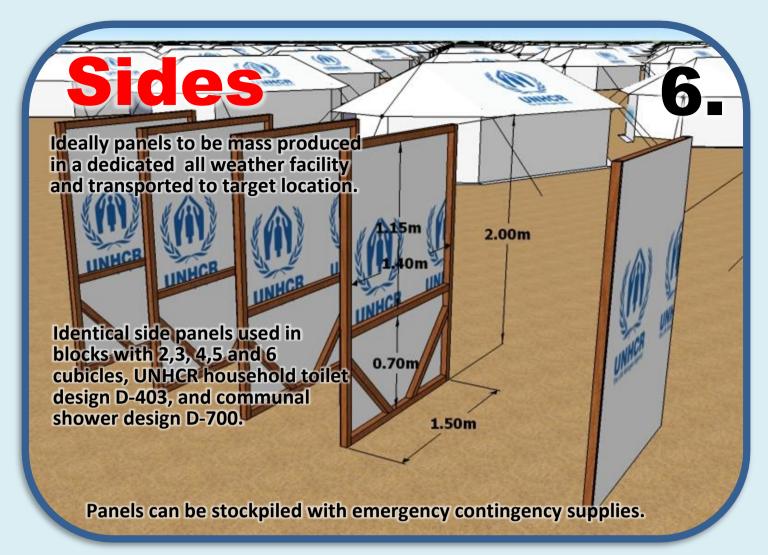


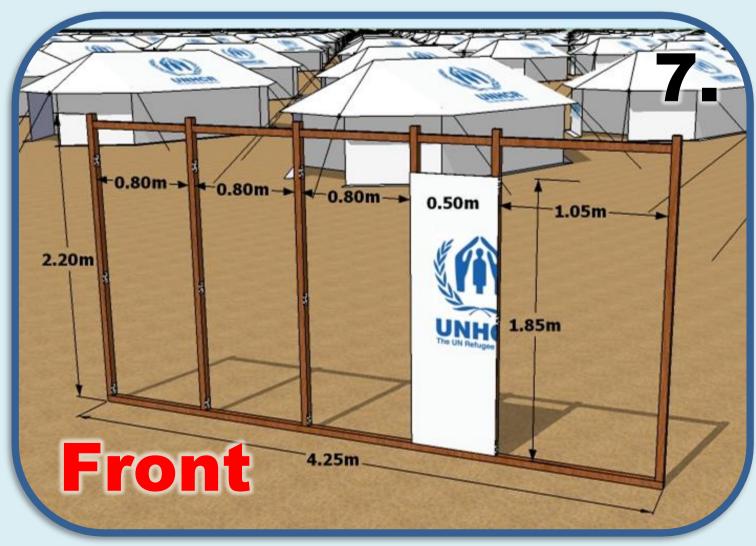

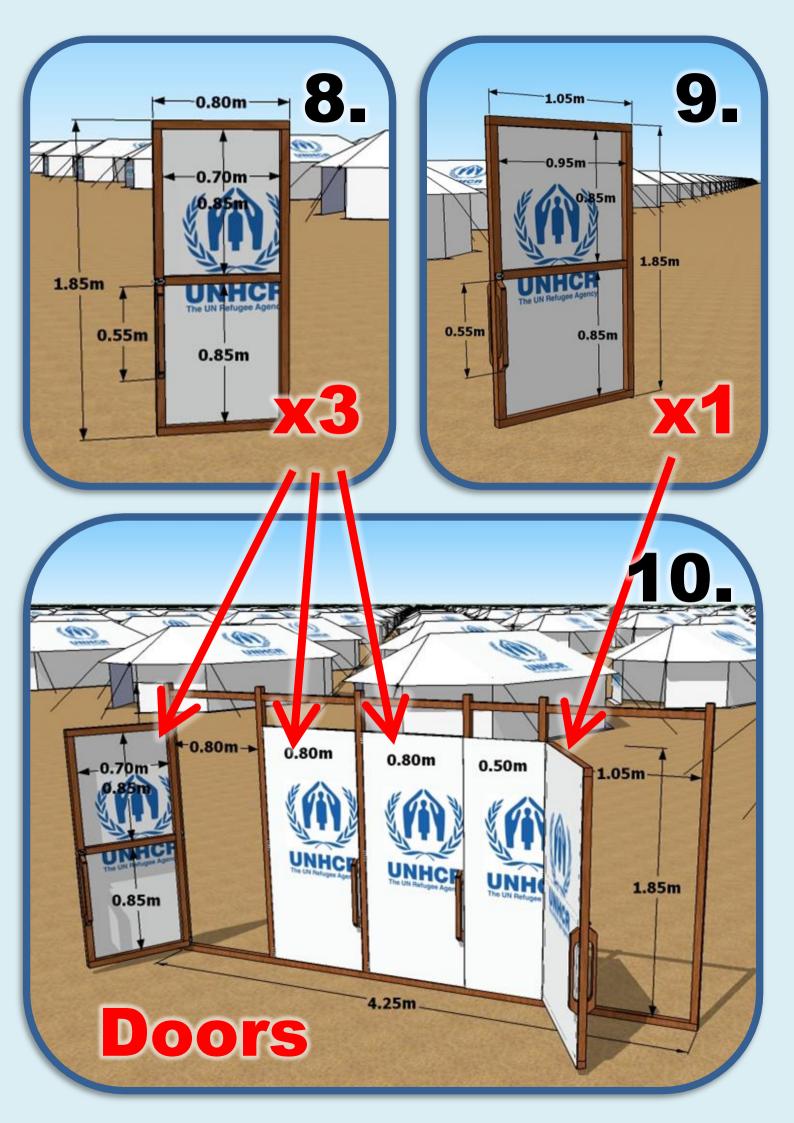




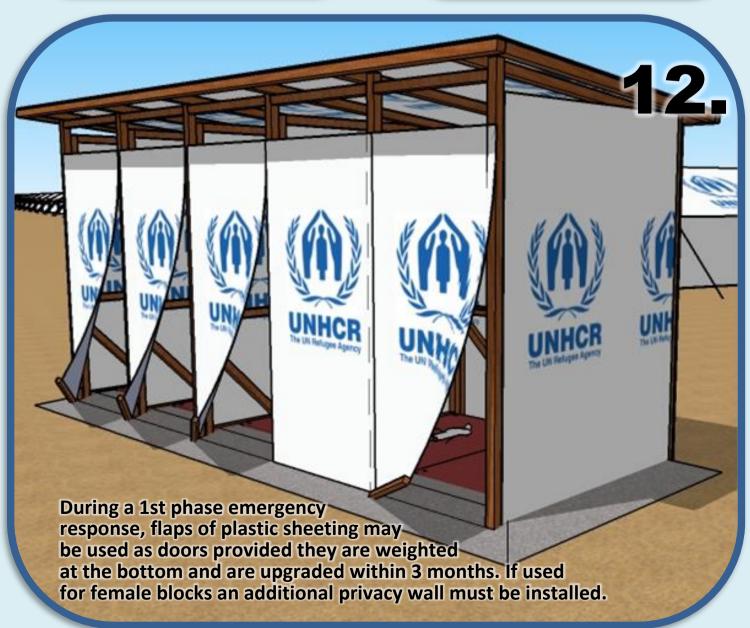


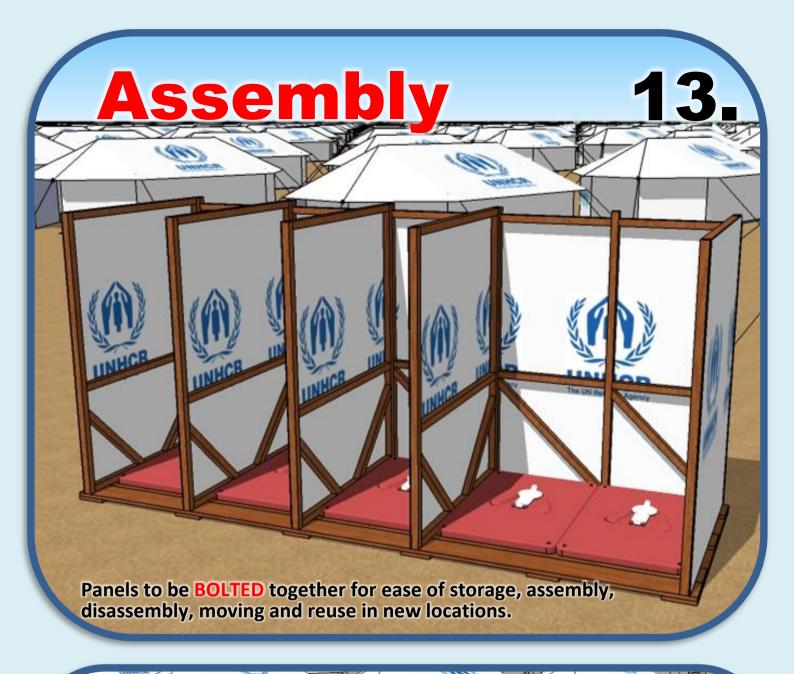






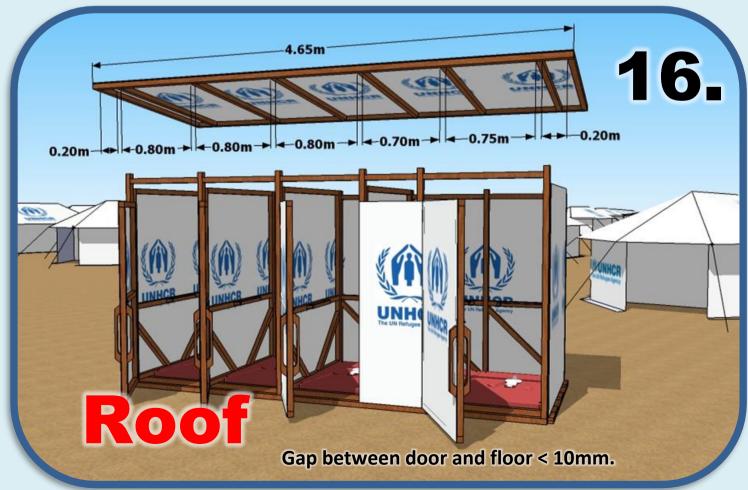

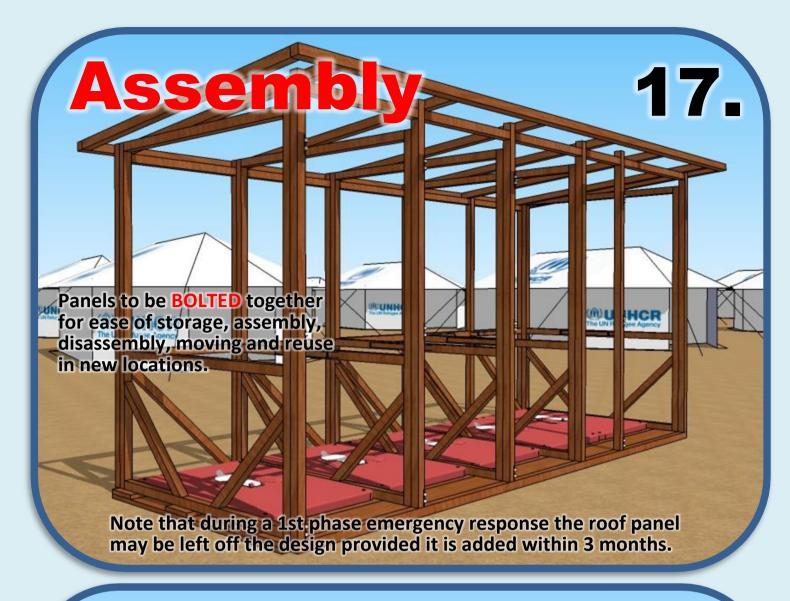






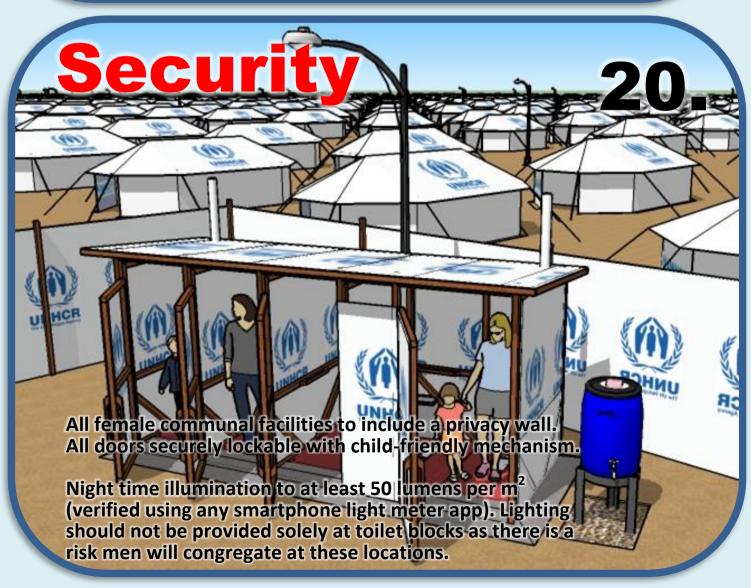



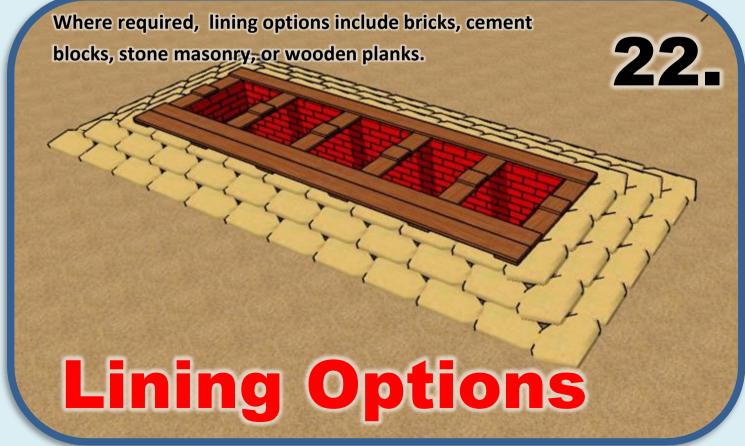







### **BILL OF QUANTITIES**

Description	QTY
Wooden Posts (4m x 5cm x 5cm)	39 pcs
Wooden Planks (4m x 20cm x 2.5cm)	7 pcs
Nails (10cm Galvanized)	4 kg
Domed Head Nails (4cm Galvanized)	3 kg
Self-Supporting Plastic InterAgency Latrine Slab (80cm x 12cm)	5 pcs
Plastic Sheeting (50m x 4m)	½ roll
Metallic Door Bolt (4cm Galvanized)	4 pcs
Metallic Door Hinge (4cm x 8cm x 2mm Galvanized)	12 pcs
Threaded Metal Bolt (M10 x 12cm Galvanized)	30 pcs
Metal Washers (M10 Galvanized)	60 pcs
Metal Nut (Hexagonal M10 Galvanized)	30 pcs
Wooden Grab Rails and Door Handles (Minimum 50cm Length)	21 pcs
Coarse Sand	0.2 m <sup>3</sup>
Coarse Gravel (6mm – 10mm)	0.4 m <sup>3</sup>
Cement (50kg sacks)	3 sacks
PVC Handwashing Reservoir (100 litres) and Tripod	1 pc
Sand Bags (25kg Capacity, UV and Rot Resistant)	132 bags

# **Bill of Quantities**

- 1. Wooden Posts (pc) 5cm x 5cm x 4m
- 2. Wooden Planks (pc) 2.5cm x 20 cm x 4m
- 3. Nails 10cm (kg)







- 4. Domed Head Nails 4cm (kg)
- 5. Self-Supporting Slab 80cm x 120cm
- 6. Plastic Sheeting 50m x 4m (roll)








- 7. Door Bolt 4cm (pc)
- 8. Door Hinge (pc) 4cm x 8cm
- 9. Metal Bolts + Washers M10 x 12cm








- 10. Grab Rails and Door Handles 50cm (pc)
- 11. Sandbags 25kg size UV resistant (pc)
- 12. Handwashing Reservoir 100l (pc)





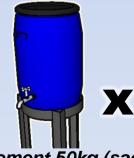

13. Sand (m3)

14. Gravel (m3)

15. Cement 50kg (sacks)









## SPECIFICATIONS FOR TOILET CONSTRUCTION IN REFUGEE SETTINGS

#### 400 SCOPE

These design guidelines specifically define the quality of materials and workmanship to be used when constructing toilets in refugee settings. A description of principles of excreta management programmes in addition to excreta management technical options and their advantages and disadvantages can be found in the UNHCR WASH Manual.

#### 401 SITE SELECTION

401.1 A basic requirement is that the site selected for the toilet facility is free from the risk of high winds, flooding, subsidence, or erosion.

# 402 PREVENTION OF SURFACE OR GROUND WATER CONTAMINATION

- 402.1 UNHCR and WASH actors must ensure that all excreta containment systems including any pits, tanks, lagoons, sewerage or soakaway do not contaminate surface water or shallow groundwater sources.
- All excreta management systems must be located at least 30 metres away from groundwater sources. The bottom of any pit or soak-away must be at least 1.5m above the highest average groundwater table level. These distances should be increased for fissured rocks and limestone.
- In some situations temporary groundwater contamination from on-site excreta management systems may not be of immediate concern if the groundwater is non-potable. An example of this can be found in coastal areas where groundwater is heavily saline beyond drinking water health limits of 1,500µS/cm². In all cases, local legislation should be respected.

#### 403 GUIDELINES FOR PIT REINFORCEMENT

- 403.1 All toilet pits should have an upper reinforcement ring of either: wooden beams, wooden trunks, brick masonry or concrete to evenly spread the load of the superstructure and raise it above ground level by at least 20 30cm to avoid water entering the pit.
- Any toilet built on soft, sandy or collapsing soils should have a brick or concrete lined pit to at least 1m below the ground surface or greater if the soil is still unstable. Any desludgable toilet should have a fully lined pit that is able to withstand repeated evacuation. Safety should be of the utmost consideration when manually excavating pits. In soft soils, pit walls should be adequately cross-braced and excavation must never exceed 2.0m depth.



#### 404 GUIDELINES FOR TOILET SLAB STRENGTH

- The toilet slab and supporting beams must be sufficiently strong to support the weight of users and should not flex of give the user reason to doubt its strength. Support beams should span at least 50cm into each of the pit walls.
- Wooden, concrete or plastic slabs should be tested with the weight of 4 persons before use. Concrete slabs should be reinforced regardless of their type. Wooden planks, trunks and beams should be free from insect attack of any kind with no other defects which would affect its strength. Wooden structures in contact with the ground should be treated with used engine oil or diesel to deter termites.

#### 405 GUIDELINES FOR TOILET SLAB ANCHORAGE

Latrine slabs should be firmly anchored in place. If plastic latrine slabs are used they should be firmly attached to the support structure either through the use of sufficiently long nails, bolts with washers, metal stakes, or heavy gauge wire.

#### 406 GUIDELINES FOR SANITARY SEALING

In all toilet installations there should be no visible gaps between the squat plate and the pit walls either through the use of at least 30cm of tamped clay soil or 30cm of concrete sanitary seal.

#### 407 GUIDELINES FOR THE USE OF PLASTIC SHEETING

- Plastic sheeting used in toilet super structures should meet the international minimum humanitarian standards (i.e. 200g/m² 700N tensile strength, UV stabilized laminated woven or braided mesh of black high density polyethylene between two white layers of low density polyethylene). Plastic sheeting is typically supplied as sheets 6m x 4m or in rolls 4m x 50m long. Before using plastic sheeting consider if there are more suitable durable materials available locally.
- 407.2 Plastic sheeting should be attached to wooden toilet frames using domed head nails, or standard nails with either wooden battens or some other form of load spreading structure (e.g. bottle tops). The most effective way of attaching plastic sheeting to a wooden frame is to wrap it around a wooden batten and then nail the batten to the support structure. Nails spacing should be no more than every 30cm. Some humanitarian plastic sheeting contains reinforcing bands of grey colour and nails should pass through these bands.
- 407.3 Plastic sheeting should be securely fixed to the ground by wrapping the edge in a wooden post and burying it to at least 40cm deep. If rope is attached to plastic sheeting it should either be attached through a reinforced eyelet or it should be tightly tied around a knot in the plastic sheeting itself.







The use of plastic sheeting toilet superstructures is an emergency solution and must be phased out after the first six months of any response. Flaps of plastic sheeting may be used in the initial first phase response provided they are adequately weighted at the bottom of the flap and they are phased out within 3 months. Female blocks with plastic flap doors should be equipped with a privacy screen.

#### 408 GUIDELINES FOR TOILET DOORS

- 408.1 Every toilet door should be hung straight and vertical with no more than 3mm gap between both sides of the door and the door frame and a maximum 10-20mm gap between the door and floor. All doors should open and close properly without fouling on the floor or door frame.
- 408.2 Each door should have at least three hinges of good quality heavy duty steel at least 50mm long, and every hole in the hinges should be filled with a screw of at least 4cm length.
- All doors should be fitted with a long upright handle of at least 50cm length on the inside and the outside that allows both children from 3 years of age and adults to open and close the toilet. A simple to use yet secure internal locking device should be installed that is positioned for use by children and adults (such as a metal bolt).

#### 409 GUIDELINES FOR COMMUNAL TOILET PRIVACY WALLS

Privacy walls should be installed completely around all female toilet facilities. Solid wooden fencing posts of at least 3m length should be installed every 4m to a depth of at least 1m. Wooden braces should be used every 5 posts and at corners. Small holes of 2 or 3cm should be cut in the plastic sheeting every 20cm to reduce wind load and deter theft. A double privacy screen with a small gap may be required in some cultures and contexts where there is a risk of people creating peep holes. Care should be taken on steep ground and a privacy roofing structure may be required to prevent onlookers.

#### 410 GUIDELINES FOR LIGHTING

Ideally all toilet facilities should be adequately illuminated to at least 50 lumens per square metre (this can be easily verified using a smart



phone light meter app). However, lighting should not be provided solely at toilet blocks as there is a risk that men will congregate at these locations. Lighting for toilet blocks should be planned in consultation with users in particular women and girls.

#### 411 GUIDELINES FOR VECTOR CONTROL MEASURES

411.1 UNHCR and WASH actors should ensure that the toilet design eliminates fly and mosquito breeding. All vent pipes should be fitted with galvanized metal fly screens. Toilet cubicles should be kept shaded with lightly sprung self-closing doors. If the toilet is not of the VIP design, tightly fitting closable lids should be used.



#### 412 GUIDELINES FOR RAIN AND STORMWATER PROTECTION

The ground directly around the outside of the toilet facilities should be backfilled and compacted to slope outwards and prevent surface water entering or eroding the toilet facilities. A drainage ditch at least 30cm deep should be installed around the WASH services to minimize external surface water entering the block.

#### 413 GUIDELINES FOR ADDITIONAL WASH BLOCK ACCESSORIES

Small modifications to toilet blocks can greatly increase the dignity of users. UNHCR and WASH actors should ensure that all toilet cubicles are equipped with either hooks or shelves so that users are able to hang additional clothes or possessions off the floor when using the facilities. If possible, the relatively cheap addition of a mirror can greatly improve the experience of using WASH facilities.

# 414 COLLECTION OF ANAL CLEANSING AND SANITARY MATERIALS

414.1 UNHCR and WASH actors should ensure that provision is made for the separate collection and disposal of used anal cleaning materials or women's sanitary material if there is a risk they may block or damage the toilet infrastructure or any desludging equipment. This also has the added advantage of extending the life of the system.



# 415 MATERIAL SPECIFICATIONS OF COMMON CONSTRUCTION MATERIALS

- Gravel used for constructing concrete toilet slabs must be clean and free from mud, dust and plant material. UNHCR and WASH actors must ensure that only crushed aggregates (not river gravel) between 6mm and 10mm are be used to prevent inter granular crack propagation across the thin toilet slab and to ensure an adequate covering under bars.
- 415.2 <u>Sand</u> used for latrine slabs should be coarse (no fines), clean and free from mud, dust and plant material.
- 415.3 Water should be non-saline and free from organic matter.
- 415.4 <u>Bricks</u> should be fully burnt (ringing sound when two bricks are hit together), of consistent shape and size and should be sufficiently strong (crush test) with a high proportion of clay.
- Cement must be fresh (manufactured in the last three months) dry, and should be stored in a safe, dry, place at least 15cm off the ground. Toilet slabs should be cast with a 1:2:4 concrete mixture. Care should be taken to ensure that the mixture is not over watered (bucket slump test should show no greater than ¼ reduction in the slump height). Cast slabs should be immediately covered with straw, cement bags, sacking or leaves to keep the concrete moist and cool. The concrete should be cured with frequent watering at least twice daily for at least 10 days before use.
- Reinforcement bars should be free from rust and of the correct type and size for concrete construction work (typically a characteristic yield stress of at least 210 N/mm²). Steel reinforcement should be placed on the lower side of the slab (the part in tension) with at least 12mm concrete covering under every bar. Reinforcement should be laid in both directions. Where the slab is rectangular, the bars parallel to the smaller span should be below the bars reinforcing the greater span. Domed Mozambican slabs must be reinforced with the correct size chicken wire covered with wire mesh and a mixture of 1 part cement to two parts sand.

Box: Spacing of mild steel bars for concrete toilet slabs								
		65mm	Slab	80mm	Slab			
	Span	Ø 6mm	Ø 8mm	Ø 6mm	Ø 8mm			
	1.00m	150mm	250mm	150mm	250mm			
	1.25m	150mm	250mm	150mm	250mm			
	1.50m	125mm	200mm	150mm	250mm			
	1.75m	75mm	150mm	125mm	200mm			
	2.00m	50mm	125mm	75mm	150mm			



Source: Franceys, Pickford & Reed (1992) 'Guide to the development of on-site sanitation'. World Health Organization, Geneva.

#### 416 HANDWASHING STATIONS DESIGN CONSIDERATIONS

- UNHCR and WASH actors must plan for at least one functional hand washing dispenser per communal or public toilet block, ensuring at least one handwashing dispenser for every five toilet cubicles. Handwashing dispensers should be conveniently located within 10m of each toilet exit and their use should be actively promoted. The water dispensing device and soap must be located within easy reach of all users, especially children. Liquid soap, or bars attached to string, may be used if there is soap theft. All handwashing units that use bars of soap should have a fixed self-draining dish where the soap can be placed between use without getting dirty or becoming mislaid.
- Hand-washing water storage containers should be sized to hold at least half a day of hand-washing water. To conserve water and avoid wastage, the hand-washing taps may need to be restricted with orifice plates to flows of 50 cubic centimetres per second (0.05 litres per second). Calculation of the total volume of hand-washing water required should be based on 0.5 to 1.0 litre of water per person per day. Hand washing reservoirs must be covered to prevent contamination or vector breeding.

#### 417 ENVIRONMENTAL CONSIDERATIONS FOR SOURCING WOOD

417.1 Ensure that all supplies of wood for household latrine slabs, latrine superstructures, privacy screens, and latrine brick production has been procured from sustainable sources outside of the refugee camp environment.

#### 418 DECOMMISSIONING

The toilet should be decommissioned when the level of excreta is within 50cm of the surface (DO NOT WAIT FOR THE PIT TO FILL TO THE SURFACE OF THE LATRINE SLAB). The superstructure should be removed and the pit should be back-filled with earth to a height of approximately 50cm to allow for settlement. Approximately 10 kg of lime may be used per cubicle to help neutralize the pH of the pit and assist in decomposition and drying. Where possible, quick growing plants or trees should be planted on the site to assist with drying of the pit.

# 419 UNHCR STANDARD TOILET DESIGNS FOR REFUGEE SETTINGS

The following drawings should be used in conjunction with these technical design guidelines.



D-400/2015a	Communal Trench Latrine (Poles + Plastic) – EMERGENCY
D-401/2015a	Communal Trench Latrine (Wood + Plastic) – EMERGENCY
D-402/2015a	Household Domed Slab Mass Fabrication
D-403/2015a	Household Toilet / Bathing Unit (1 Family, Dome Slab, Alternating)
D-404/2015a	Household Toilet / Bathing Unit (Septic Tank and Drain Field)
D-405/2015a	Raised Storage Latrine (Holding Tanks) - EMERGENCY
D-406/2015a	Urine Diverting Dry Toilet (UDDT)
D-407/2015a	Institutional Latrine (Desludgable with Raised Option)
D-408/2015a	Institutional Latrine (Septic Tanks and Drain Field)



#### **USEFUL REFERENCES**

- ACF (2005), 'Water, sanitation and hygiene for populations at risk second edition'. ACF, Paris, France.
   http://www.actioncontrelafaim.org/publications/fichiers/wsh\_acf\_0.pdf
  - Bastable A. (2000). 'Guidelines for excreta disposal in emergencies. An
  - Oxfam Technical Manual'. Oxfam GB, Oxford, UK.

    <a href="http://ec.europa.eu/echo/files/evaluation/watsan2005/">http://ec.europa.eu/echo/files/evaluation/watsan2005/</a>
    <a href="mainto:annex\_files/OXFAM/OXF7%20-">annex\_files/OXFAM/OXF7%20-</a>
    <a href="mainto:self-transform-test-align: center;">%20Guidelines%20for%20exceta%20disposal%20%20in%20emergencies.PDF</a>
- ◆ CAWST (2011) 'Introduction to low-cost sanitation'. Centre for Affordable Water and Sanitation Technology CAWST, Calgary, Canada. http://resources.cawst.org/system/files/Sanitation\_Manual\_2011-02\_en.pdf
- ◆ Franceys, Pickford & Reed (1992) 'Guide to the development of on-site sanitation'. World Health Organization, Geneva. <a href="http://whqlibdoc.who.int/publications/1992/9241544430\_eng.pdf">http://whqlibdoc.who.int/publications/1992/9241544430\_eng.pdf</a>
- Harvey P. A (2007) 'Excreta disposal in emergencies: A field manual'.
   WEDC, Loughborough University, UK. <a href="http://www.unhcr.org/4a3391c46.html">http://www.unhcr.org/4a3391c46.html</a>
- Harvey P. A., Baghri S. and Reed R. A. (2002) 'Emergency sanitation assessment and programme design'. WEDC, Loughborough University, UK. <a href="http://reliefweb.int/sites/reliefweb.int/">http://reliefweb.int/sites/reliefweb.int/</a>
  files/resources/2533D212287DCAC6C1256D780035CC8D-lou-water-02.pdf
- ▲ Lambert, R., and Davis, J. (2002), 'Engineering in emergencies 2nd Ed.', Register of Engineers for Disaster Relief (RedR), London.
- Obika A. (2004) 'Catalogue of low cost toilet options'. WEDC, Loughborough University, UK. <a href="http://www.ircwash.org/sites/default/files/Obika-2004-Catalogue.pdf">http://www.ircwash.org/sites/default/files/Obika-2004-Catalogue.pdf</a>
- ◆ PEN (2010). 'Philippine emergency sanitation reference toolkit (excreta disposal)'. Philippine Ecosan Network, Manilla.
  <a href="http://www.sswm.info/sites/default/files/reference\_attachments/PEN%202010">http://www.sswm.info/sites/default/files/reference\_attachments/PEN%202010</a>
  %20Philippine%20Emergency%20Sanitation%20Reference%20Toolkit.pdf
- Reed R. A. (2010) 'Emergency excreta disposal standards and options for Haiti'. DINEPA and Global WASH Cluster, Haiti. <a href="http://wedc.lboro.ac.uk/resources/pubs/Emergency EDS">http://wedc.lboro.ac.uk/resources/pubs/Emergency EDS</a> and options for Haiti.pdf
- ◆ Tilley, E (2008) 'Compendium of sanitation systems and technologies', SANDEC and EAWAG, Swiss Federal Institute of Aquatic Science and Technology, Dübendorf, Switzerland. <a href="http://www.eawag.ch/forschung/sandec/publikationen/compendium\_e/index\_EN">http://www.eawag.ch/forschung/sandec/publikationen/compendium\_e/index\_EN</a>
- Van den Noortgate J., Maes P. (2010) 'Public health engineering in precarious situations – second edition'. MSF, Brussels.
   <a href="http://refbooks.msf.org/msf\_docs/en/public\_health\_en.pdf">http://refbooks.msf.org/msf\_docs/en/public\_health\_en.pdf</a>



- ◆ USAID (1982) 'Designing aqua privies. Water for the world technical brief', USAID, Washington USA. http://www.lifewater.org/resources/san1/san1d4.pdf
- ◆ USAID (1982) 'Designing latrine pits. Water for the world technical brief', USAID, Washington USA. <a href="http://wiki.watermissions.org/GetFile.aspx?Page=Simple%20Excreta%20and">http://wiki.watermissions.org/GetFile.aspx?Page=Simple%20Excreta%20and</a> %20Washwater%20Disposal%20SAN1&File=san1c2.pdf
- USAID (1982) 'Designing latrine slabs. Water for the world technical brief', USAID, Washington USA.
  <a href="http://wiki.watermissions.org/GetFile.aspx?Page=Simple%20Excreta%20and%20Washwater%20Disposal%20SAN1&File=san1d1.pdf">http://wiki.watermissions.org/GetFile.aspx?Page=Simple%20Excreta%20and%20Washwater%20Disposal%20SAN1&File=san1d1.pdf</a>
- ♦ USAID (1982) 'Simple methods of excreta disposal. Water for the world technical brief', USAID, Washington USA. <a href="http://wiki.watermissions.org/(S(qmdltna0sc2kvjumvmak4z45))/GetFile.aspx?">http://wiki.watermissions.org/(S(qmdltna0sc2kvjumvmak4z45))/GetFile.aspx?</a> <a href="mailto-page-Simple%20Excreta%20and%20Washwater%20Disposal%20SAN1&File.san1m1.pdf">Page-Simple%20Excreta%20and%20Washwater%20Disposal%20SAN1&File.san1m1.pdf</a>
- WHO (2005) 'Emergency sanitation planning'. Technical notes for emergencies #13'. World Health Organization, Geneva.
   <a href="http://www.who.int/entity/water\_sanitation\_health/publications/2011/WHO\_TN\_13">http://www.who.int/entity/water\_sanitation\_health/publications/2011/WHO\_TN\_13</a> Planning for excreta disposal in emergencies.pdf
- ♦ WHO (2005) 'Technical options for excreta disposal in emergencies'. Technical notes for emergencies #14'. World Health Organization, Geneva. <a href="http://www.who.int/water\_sanitation\_health/publications/2011/tn14\_tech\_options\_excreta\_en.pdf?ua=1">http://www.who.int/water\_sanitation\_health/publications/2011/tn14\_tech\_options\_excreta\_en.pdf?ua=1</a>